



# Delta 200 Quick Start Guide

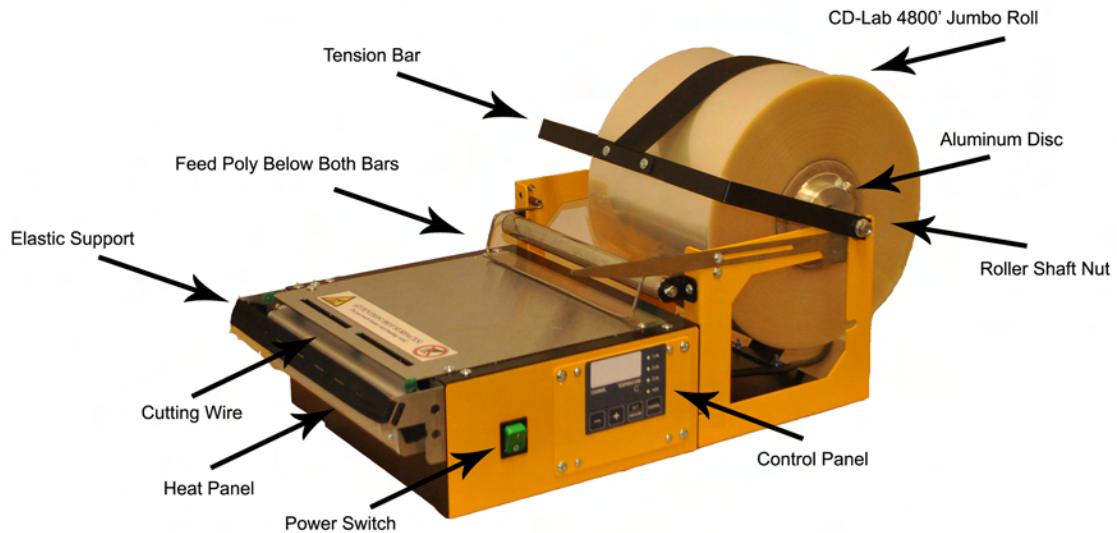

## Install Poly Roll:

1. Loosen nuts on end of roller shaft
2. Pull black tension bar up, out and away from roller shaft
3. Remove roller shaft
4. Remove one aluminum disc from shaft and loosen the other
5. Install Poly roll onto shaft and center
6. Slide aluminum discs against roll so they are snug and tighten
7. Place assembled roll on machine with material feeding from top
8. Replace tension bar on roller shaft and position the elastic material across the top of the roll with some tension and replace nuts and washers
9. Feed poly under the two bars. Lift up on the small bar to make it easier to feed the poly through.

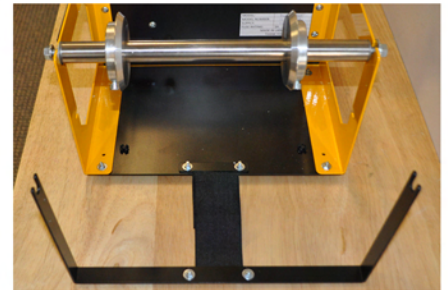

## Getting Started:

1. Install Power cord and turn on the power switch
2. Make sure Channel 1 is selected by depressing the Channel button. The number 1 will appear in the upper left of the display. Once the heat panel (Channel 1) reaches 130 degrees Celsius the Delta 200 is ready to wrap.

Optional support (see pic) This was developed for new users of the machine to help support the item being wrapped.

